


EVOTD - MARD / SAFE SYSTEM

THE SAFE MARD FOR THE EVO HARNESS CONTAINER

COMPONENTS -

1. RIPCORD WITH PIN
2. RSL LANYARD WITH SAFETY PIN & MARINE EYE
3. SAFE/MARD LANYARD
4. RETENTION BUNGEE
5. LANYARD WITH RESERVE PIN

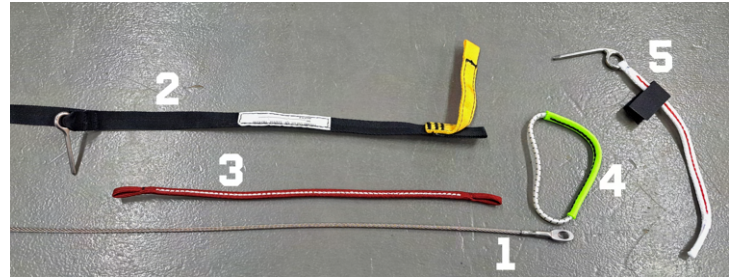


★ PREPARING THE SAFE/MARD -


1. LARS HEAD SAFE LANYARD WITH THE RETENTION BUNGEE.



2. TIGHTEN UP BOTH BY PULLING BOTH ENDS.


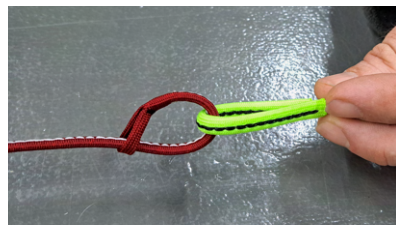


3. LARS HEAD OPPOSITE END OF SAFE LANYARD WITH THE BLACK END OF THE RSL.

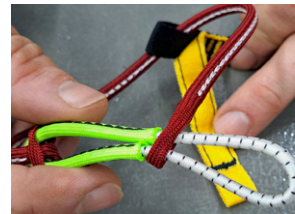

4. SECURE BY PULLING BOTH ENDS TIGHT.

5. LARS HEAD RESERVE PIN LANYARD THROUGH RSL TAB.

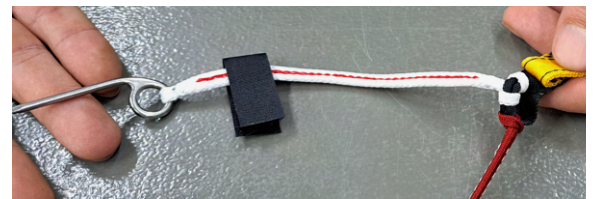
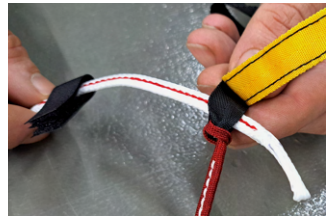


★ ASSEMBLY & PACKING -

1. FOLD BRIDLE AT GREEN MARKING (BARTACK) & INSERT 10" (25CM) OF THE SAFETY THREAD.
2. INSERT MARD BUNGEE THROUGH THE GROMMET FROM THE BOTTOM.
3. INSERT HEMOSTAT THROUGH ALL 2 CHANNELS & MARD BUNGEE INTO THE OPPOSITE DIRECTION OF THE ARROWS.
4. FOLD THE BRIDLE INTO A TIP AT THE GREEN MARKING.
5. GRAB FOLDED BRIDLE TIP WITH HEMOSTAT & PULL TROUGH ALL CHANNELS & MARD BUNGEE.



6. ALIGN GREEN TIP WITH GREEN MARKING ON THE SIDES OF THE SAFE / MARD.
7. INSERT HEMOSTAT THROUGH SPECTRA LOOP TO EASE THE INSERTION OF THE SAFETY THREAD.
8. INSERT SAFETY THREAD THROUGH SPECTRA LOOP & SECURE WITH A SURGEON & LOCK KNOT.
9. FYI : THIS WILL ENSURE THAT THE TIP WILL NOT BE DISENGAGED.
10. SAFE MARD READY TO INSTALL (YELLOW RSL LANYARD ONLY TO SHOW DIFFERENCE BETWEEN SAFE MARD LANYARD).

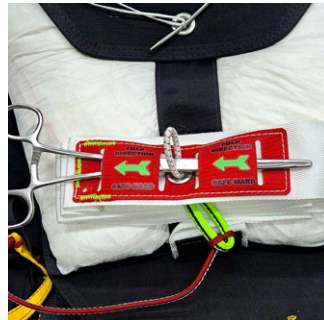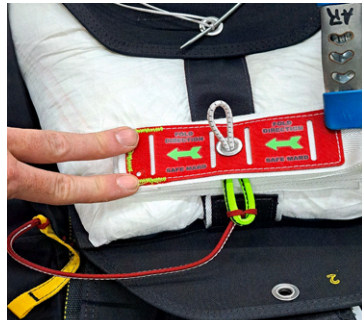

11. CLOSE FLAP #1, FOLD BRIDLE UNTIL SAFE / MARD IS IN POSITION UNDER FLAP # 2. CLOSE FLAP #2
12. AFTER FLAP #2 IS CLOSED, MAKE SURE SAFE MARD & FOLDS ARE IN PLACE.

★ **MAINTENANCE -**

THE RETENTION BUNGEE [4MM ELASTIC WITH NEON GREEN SHEETING] HAS TO BE REPLACED IF, AFTER A DEPLOYMENT, THERE IS DAMAGE TO THE BUNGEE OR ONE OF THE STITCHES ON THE SHEETING IS BROKEN.

- ★ EVERY EVO COMES WITH 3 BUNGEEES.
- ★ SPARE BUNGEEES CAN BE ORDERED THROUGH:

ORDER@FLYFIREBIRD.COM

